


Fitting instructions

WIKO5000 Gooseneck (all types and sizes)

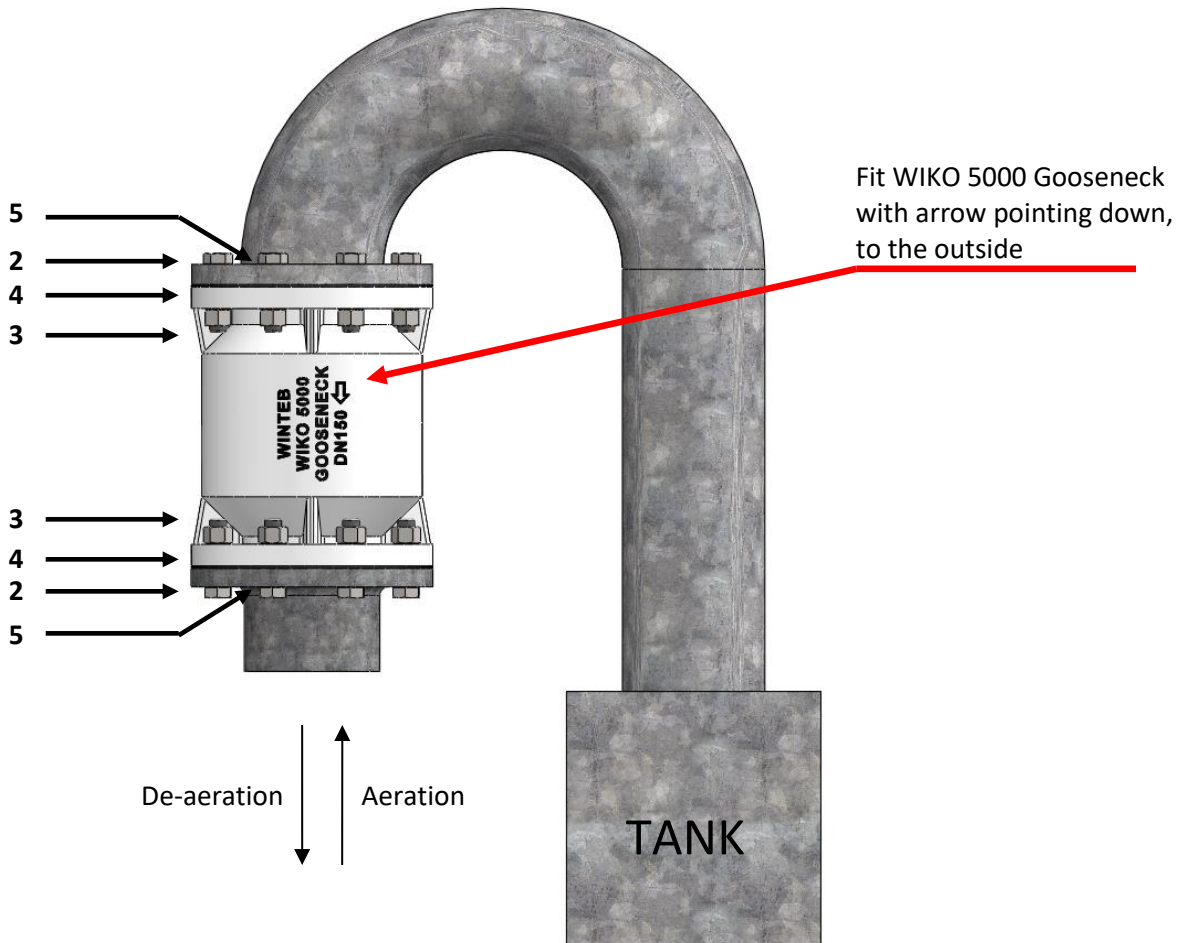

1. Do not paint screen (if fitted)

Check classification rules if a screen is needed when the air pipe head is fitted on a ballast tank. If not, remove the screen when the air pipe head is fitted on ballast tanks

2. Use galvanised or stainless steel bolts and nuts (available at WINTEB).

3. Use isolation sleeves (supplied by WINTEB – attached to flange).

4. Use full size gasket (supplied by WINTEB – attached to flange).

5. Use flat face counter flanges (available at WINTEB).

6. Hand tighten the flange bolts.

See torque values →

M16	60-70 Nm
M20	60-70 Nm
M24	70-80 Nm

If you have any questions please contact us.

This information is not to be considered exhaustive. The content of this publication is of general and informative nature and is not meant as (technical) advice for product or usage purposes. No rights are to be derived from this information.